



Precision Environmental Control

Free-Cool Economizer Systems



ECOSAIRE® FREE-COOL

Free-Cool is a glycol-cooled Ecosaire® system which provides cooling without the use of the refrigeration compressors during cool weather. It is capable of matching the cooling performance of the refrigeration system at outdoor temperatures of 42°F to 47°F (50°F to 55°F entering glycol temperature) depending on the unit selection and room heat load. As in all Ecosaire® systems, Free-Cool provides the highest possible sensible cooling capacity at rated room temperatures.


Traditional precision air conditioning systems use the economizer coil to precool the air upstream of the evaporator. This lowers the suction pressure, resulting in reduced compressor efficiency (EER) while reducing the total refrigeration capacity and increasing latent cooling. Hot-gas bypass valves are sometimes necessary to prevent the evaporator from freezing, and larger blower motors are necessary to overcome the resistance of the economizer coil.

The Ecosaire® Free-Cool system eliminates all of these problems with a specially designed, proprietary dual-circuit Free-Cool coil. Although the Free-Cool system contains all of the standard features found in the glycol-cooled unit, the circuits of each Free-Cool coil have been fully interlaced with the refrigeration circuit. This greatly increases the effective surface area, providing increased Free-Cool capacity and dual Free-Cool circuits for staged cooling. Each glycol circuit is controlled by an independent solenoid valve which, in conjunction with the Supervisaire® controls, prevents simultaneous operation of the Free-Cool and refrigeration circuits.


This unique Free-Cool system has been engineered for total energy savings throughout the year. Unnecessary dehumidification and subsequent rehumidification has been eliminated during the Free-Cool cycle. Compressor EER has been maintained and the need for hot-gas bypass valves eliminated. The integrated coil allows the standard fan motors to provide rated air flow, eliminating the need for increased fan motor horsepower.




FREE-COOL SEQUENCE OF OPERATION

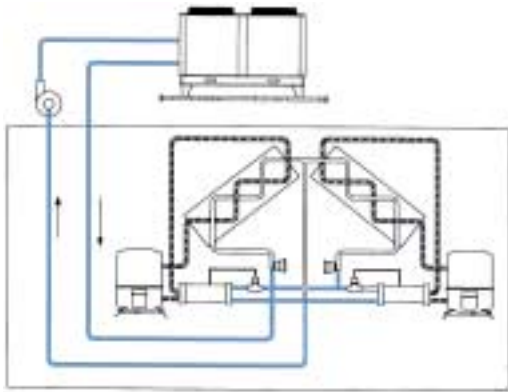

When the outdoor air temperature is above 60°F (70°F entering glycol temperature), the Free-Cool solenoid valves are closed. The compressors cycle with the room load, and the glycol pump is activated whenever either compressor is on. Condensing temperature is maintained by two-way, head-pressure-controlled glycol regulating valves.

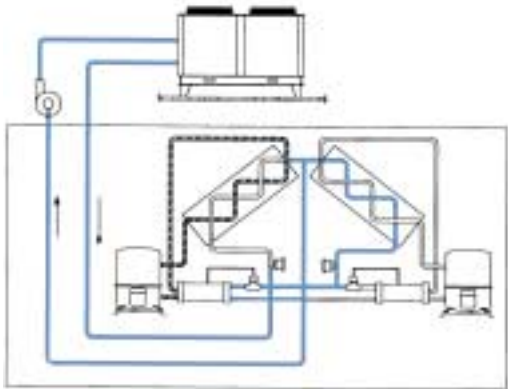

At outside temperatures below 60°F, compressors 1 and 2 energize as necessary to meet the room load. Whenever either compressor cycles off, the corresponding Free-Cool solenoid valve opens, allowing glycol to flow through the interlaced coil, extending the compressor "off" cycle. The pump is activated whenever the Supervisaire® senses a room load.

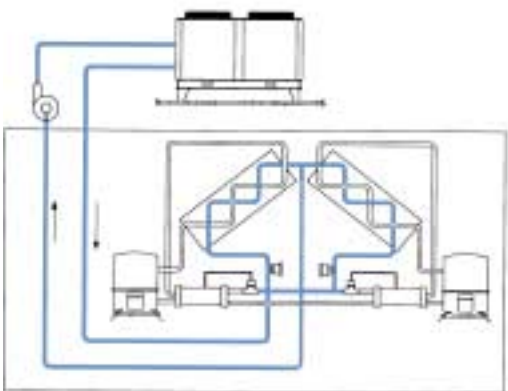

At outside temperatures below 40°F to 45°F (depending on unit selection and room load) the Free-Cool system will match the capacity of the refrigeration system: both compressors are off, the glycol pump is on, and the glycol solenoid valves respond to room load.



Supervisaire® Controls

- Back lit user-friendly interface
- BACNET™, ECHELON® and MODBUS™ compatible
- Built-in networking capability with graphics display on remote supervisory panel
- High-capacity event savings and alarm log
- Easily programmed for custom applications



Refrigeration Circuit

- Unique Free-Cool option for glycol systems with interlaced coil provides maximum operating efficiency in cold weather. (Partial Free-Cool starts as high as 60°F ambient temperature).



designer indoor air™



2107 Liberty Drive
Niagara Falls, NY
USA 14304

2180 Dunwin Drive, Unit 7
Mississauga, Ontario
Canada L5L 1C7

Toll Free: 1.800.387.1930
Fax: 905.828.5018
www.dectron.com
email: info@dectron.com

Ecosaire® customers include:

Bell Canada
Canada Post
Canopy Group
Carleton University
Canadian Pacific
Canadian Parliament
Cisco Systems
City of Toronto
Dept. of National Defence
e-Spire
Ericsson
IBM
Imperial Oil
Intel
Janus Funds
JD Edwards
MCI
Mitel
Nortel
Ontario Hydro
Poudre Valley Hospital
Sprint
TCI
Telesat Canada
University of Québec
U.S. Air Force
Westwind Media

Dectron reserves the right to make any changes in the design or specification of any product at any time without notice.

Printed in Canada LIT00103-ED0204-2K